


Installation Instructions for ASF Model Rupture Disks Sensor

ALARM SENSOR FITTING

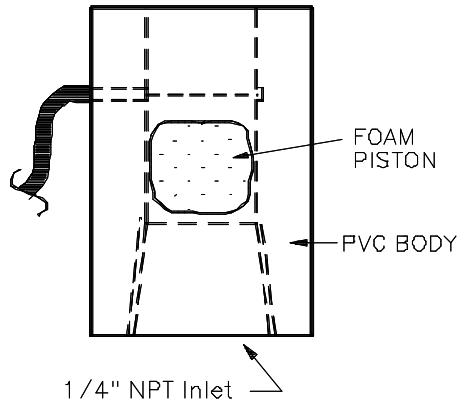

FEATURES:

1. Designed to be used downstream of rupture disks installed on plastic extruders.
2. Normally closed circuit, opens on alarm.
3. No tools required. Simply screw on and hand tighten on the end of the discharge pipe and connect the wires.

INSTALLATION INSTRUCTIONS:

1. Caution: Discharge to safe area.
2. Check continuity before and after installation.
3. Screw ASF onto 1/4" NPT male discharge pipe (by hand).
4. Connect wires to alarm system.

Electrical Data	
Max Current	150 mA
Temperature Range	0° to 150 °F
Resistance	20 Ohms (max Pre-burst Resistance)

Burst Pressures	
Minimum	Maximum
15 PSIG	5000 PSIG

Materials	
Body	PVC Plastic
Circuit	Graphite Rod
Cable	12 in., 24 AWG, Insulated, 2 conductor